

WARNING: READ THE ASSEMBLING INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING THE SELECT GRANDSTAND.



Make sure to wear protective gloves and foot protection when installing and assembling this product. Unpack the unit and make sure all the components are included before proceeding. This activity requires two or more people as lifting is involved. Please ensure bolts are only finger tightened during the assembling process for flexibility in lining up components. Securely tighten the bolts before anchoring the product to the ground.




SELECT GRANDSTAND


4 TIERS X 4 m.

(Code No: SEL G4T4)

PART No.	PART NAME	QTY
SG1	ALUMINIUM FRAME	4
SG2	ALUMINIUM SEAT PLANK	7
SG3	ALUMINIUM BACK REST	1
SG4	BACK REST PLATE	1
SG5	TRUSS / CROSS BAR	6
SG6	M10x35mm. HEX. HEAD BOLT	4
SG7	M12x90mm. HEX. HEAD BOLT	8
SG8	M6x25 mm. HEX. HEAD BOLT	120
SG9	M6 LOCKNUT	120
SG10	M10 LOCKNUT	4
SG11	M10 PLAIN WASHER	8
SG12	M12 PLAIN WASHER	16
SG13	M12 LOCKNUT	8

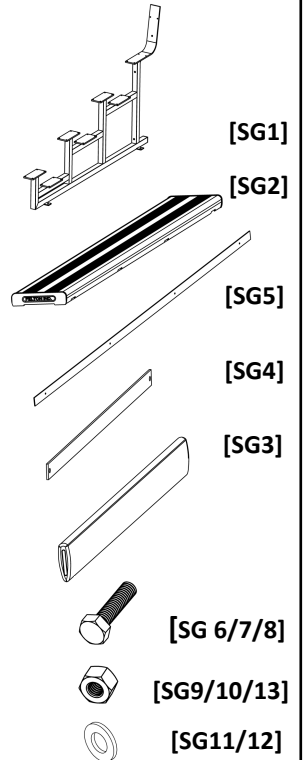

1

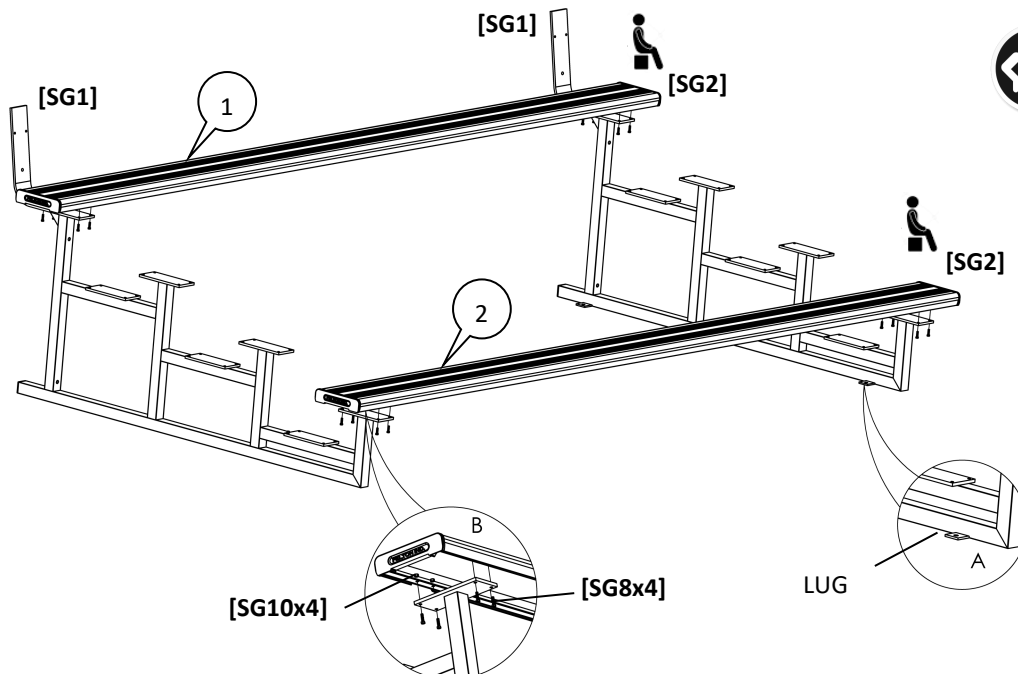

A. Have two frames [SG1] up with bolt down lugs facing inwards.


B. Place the back seat plank [SG2] on top frames [SG1] (STEP 1), and secure them with bolts [SG8] and lock nuts [SG9] - finger tighten.

C. Place the front seat plank [SG2] (STEP 2) onto the frames [SG1] and bolt through as per item B.

IT CONTINUES ON THE BACK
PAGE


1

2

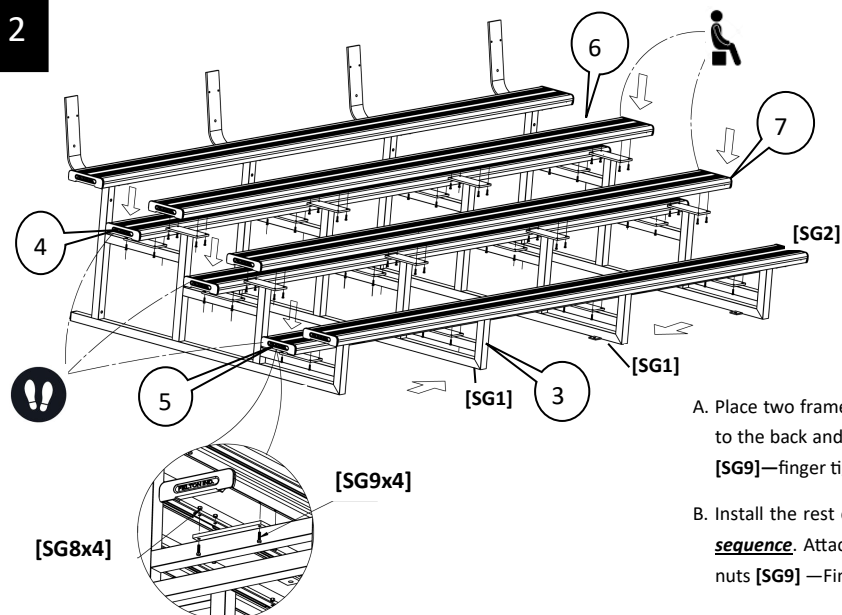


- A. Place two frames [SG1] in the middle with lugs facing inwards and secure them to the back and front seat planks [SG2] with hex head bolts [SG8] and lock nuts [SG9]—finger tighten.
- B. Install the rest of the foot and seat planks [SG2] as shown *in the illustration's sequence*. Attach the planks to the frames [SG1] with hex bolts [SG8] and lock nuts [SG9]—Finger tighten.

3

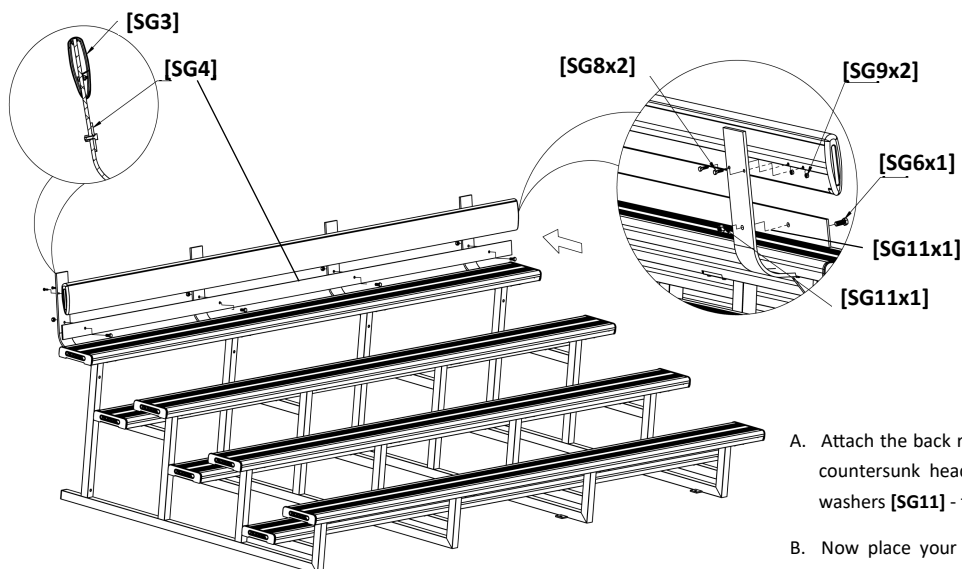

- A. Attach the back rest flat bar [SG4] to the frames [SG1] with countersunk head bolts [SG6], lock nuts [SG10] and plain washers [SG11] - finger tighten.
- B. Now place your backrest [SG3] on, line it up accordingly, attach it with hexagonal head bolts [SG8] and locknuts [SG9] —hand tighten.

4

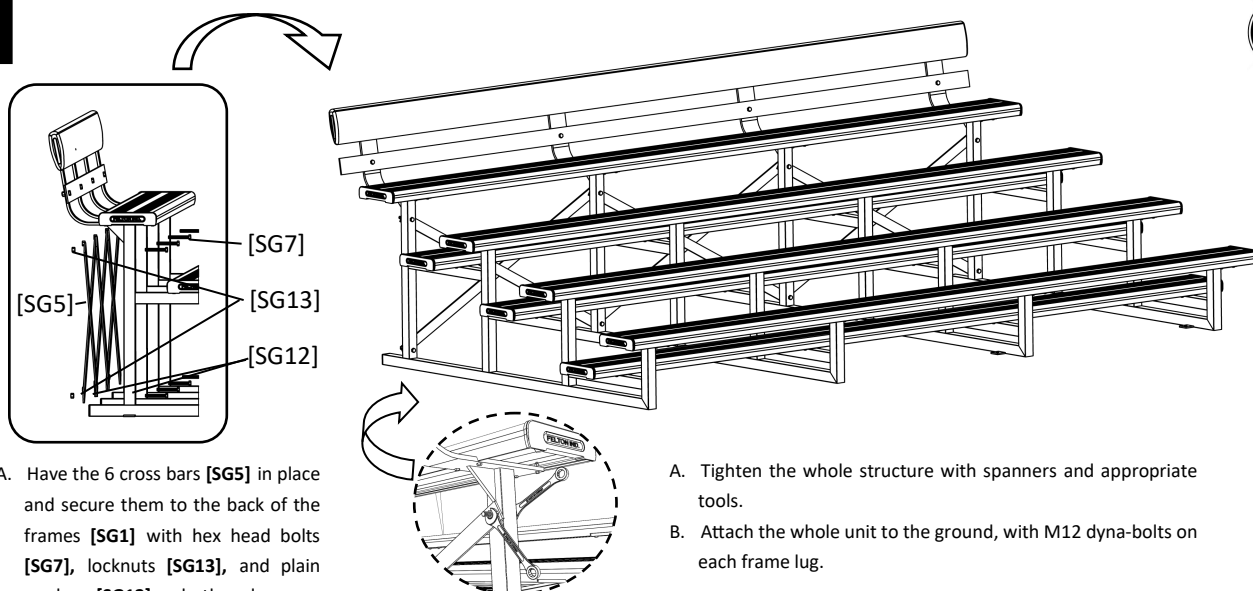

- A. Have the 6 cross bars [SG5] in place and secure them to the back of the frames [SG1] with hex head bolts [SG7], locknuts [SG13], and plain washers [SG12] on both ends.

- A. Tighten the whole structure with spanners and appropriate tools.
- B. Attach the whole unit to the ground, with M12 dyna-bolts on each frame lug.